


# Air Assist

Product that is to be dispensed at high flow rates can occasionally load the output hose from the hopper and create a blockage of material. This is especially true if using Altosid XR-G or any sand based material. Pellets and cob materials don't usually require air assist even at the highest flow rate. By installing the air assist at the outlet for the Arro-Gun pistol or cannon, air is routed through the rear of the hopper feed and pushes the fine grains with positive airflow.

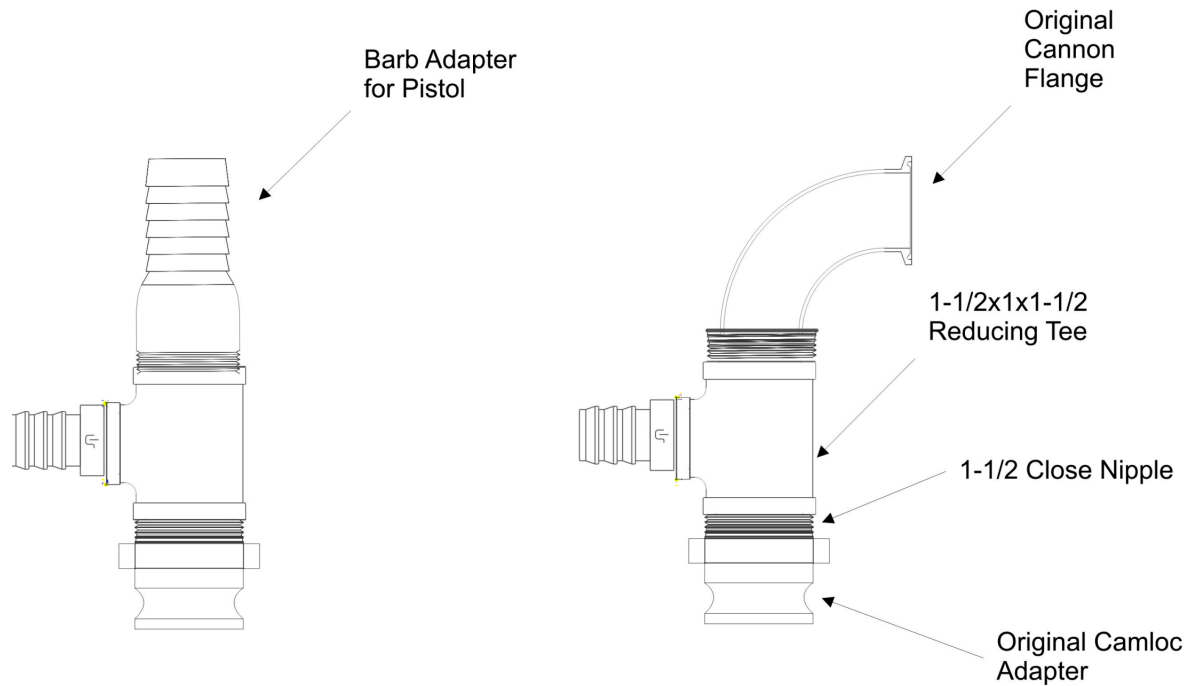

Instructions for adding air assist tee to Arro-Gun Granular Applicator:

1. Remove the large 1-1/2 " barb or cannon flange from the aluminum adapter that plugs into the quick disconnect. Assemble the aluminum adapter to the male thread of the reducer tee supplied. Assemble the 1-1/2 " barb or cannon flange to the female thread of the reducer tee.
2. Insert assembly into quick connect and reinstall locking pins.
3. Remove the screen assembly from the rear of the hopper impeller housing. Attach one end of the 1" hose supplied to the barbed tee where screen was removed.
4. Attach the remaining end of the 1" hose to the reducer tee.

**Arro-Gun Spray Systems, LLC**